

# Crown and bridge Prosthodontics

LECTURE: 6

PROF. ADEL FARHAN IBRAHEEM

## Final Impression (Conventional & Digital) in FP

### Conventional impression:

For the *final impression* we need *special tray, special impression syringe and the impression material*. The special tray is made on the study cast.

#### Advantages of the study cast:

- 1) Diagnosis and treatment planning.
- 2) Construction of provisional restoration.
- 3) Construction of special tray.

#### Advantages of special tray:

- 1) It allows the use of impression material in minimum thickness to reduce its dimensional changes.
- 2) It reduces the discomfort of the patient because it is well fitted to the patient's mouth.
- 3) Its small size prevents the forcible opening of the mouth.
- 4) It allows free snap-removal of the impression (without applying rotary movements).

#### □ impression syringe :

Most of time it is made from clear plastic and should be available with different nozzle sizes, we need this syringe to carry light body impression material from the mixing slab and inject it, then, to the different areas of preparation.


### Impression techniques:

According to the Viscosity Of impression Materials used during impression registration we have;

1. **One step Impression technique**
  - I. Monophase Single Viscosity
  - II. Heavy-Light
2. **Two steps Impression technique**
  - I. Spaced Putty Wash
  - II. Un Spaced Putty Wash

#### 1) **One step (monophase Single viscosity) technique.**

Most of the time, we use this technique when we have impression material with single viscosity (medium body with polyether impression material) after we mix the material, part of the impression material is loaded in the syringe from the mixing slab, the other mixed part of the material is loaded into the tray. The impression material is injected from the syringe around the preparations starting with the most critical parts (pin holes, finishing lines then, the preparations and the remaining part of the dental arch then), the special tray loaded with impression material were then inserted inside the patient mouth and seat over the whole dental arch., wait for complete setting of the impression material then, it can be removed from the patient's mouth.

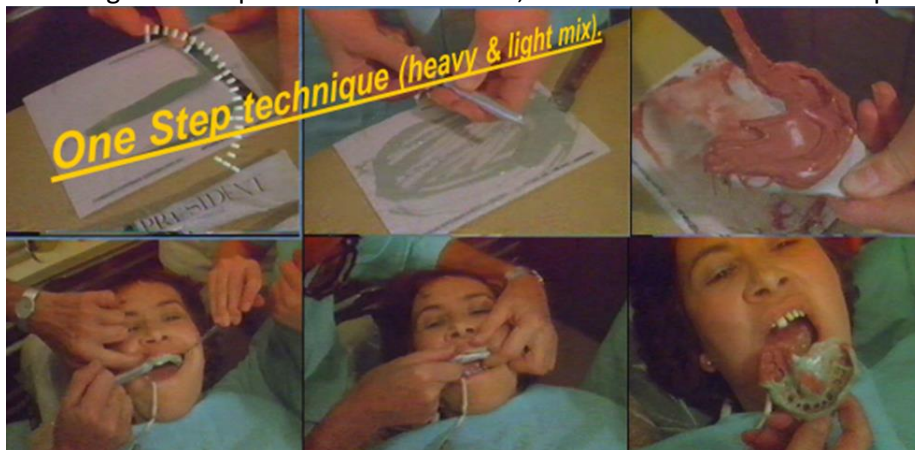

## 2) One step (heavy light or Double mix) technique.

Usually used with materials that have two viscosities (heavy and light bodies), we mix the heavy and light bodies at the same time then, the light body is loaded in the syringe while, the heavy body is loaded in the special tray. We start to inject the light body on the dental arch starting with the prepared tooth then, the special tray with heavy body is inserted inside the patient's mouth and seated over the dental arch. The pressure created by the heavy body will create

- An intimate contact of light body with the prepared tooth surface.
- make direct flow of the light body into details of the preparation.

## 3) Two steps Putty wash technique.

This technique uses a high viscosity putty material, we start taking the impression with the putty body which could be before or after tooth preparation. Putty impression be:

- 1) **Unspaced putty impression;** putty impression is recorded first after tooth preparation, then, after setting it relined with a thin layer or wash of light body impression material.
- 2) **Spaced putty impression as for** un-spaced except a space is created inside the putty impression for the wash (light body) layer. **Space could be created by:**
  - I. Record with putty before teeth preparation
  - II. Record with putty after teeth preparation. Create space using **polyethylene spacer**.
  - III. Record with putty after teeth preparation. Create a space and escape channels using a scalpel.

### Impression Procedure;

#### Step one:

#### Spaced PWT;

**Putty impression of dental arch including the prepared tooth or teeth is firstly taken, space inside impression is created by one of following means:**

- 1) **Before preparation:** we take a preoperative impression with the putty body only prior to tooth preparation, and after complete setting of the heavy body, remove the impression tray from the patient's mouth and leave it aside. Then we do tooth preparation.
- 2) **After preparation:** in this technique, after mixing of the putty body and loading it in the tray, a spacer made of polyethylene is placed over the heavy body and the tray is inserted inside the patient's mouth. After complete setting of the heavy body, the tray is removed and the spacer is removed.
- 3) Or you can take putty impression after teeth preparation without spacer, then, after removal of the putty impression tray from the patient's mouth create a space and escape channels by removing from inside using a scalpel.

- Un spaced PWT:** as previous except that putty impression recorded after teeth preparation, no space is created here whether by using spacer or removal of surface layer of putty by scalpel, then, after complete setting, it is removed from the patient's mouth and left a side.




**Step two:**

**Whether spaced or un spaced putty wash technique, The next step** is to mix the light body impression material, part of the mix loaded into the impression syringe while the remaining portion of the mix is placed into the tray over the heavy body impression. The light body were then injected around the preparation and the whole dental arch, the heavy body impression were, then, reseat inside the patient's mouth over the injected light body imp.mat. and wait for the complete setting of the light body.



**Impression for the post crown:**

We need an impression for the root canal space, so, the impression material most of the time is difficult to be inserted inside the tiny canal and even when it fills the canal it might tear during removal or might be distorted during pouring with die stone (during construction of working cast). Therefore, So the impression material need a type of reinforcement, this can be obtained either by a plastic post or by stainless wire, which is inserted into the canal after injecting the light body inside the canal, this will support the impression material and prevents its tearing or distortion during removal of the impression, after the setting of the material, from the patient mouth

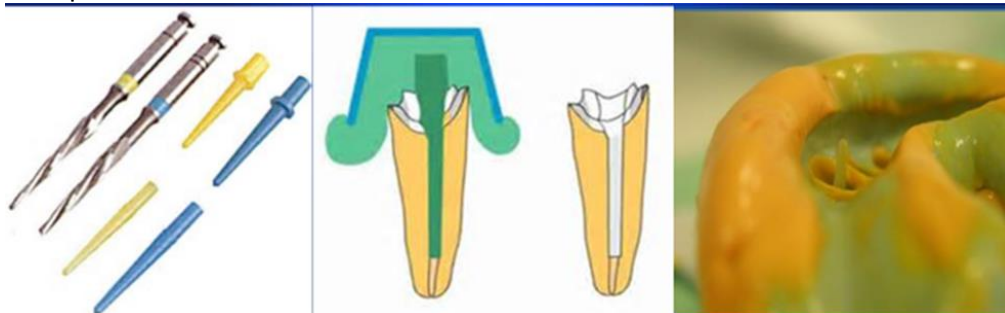

**The impression should be inspected for the following:**

1. **Finishing line should be continuous from one side to another.**
2. **Presence of air bubble in the area of preparation.**
3. **Good attachment of the impression material to the tray.**

**Remember that** you need the following requirements to obtain a good final impression:

- 1) Special tray.
- 2) Impression syringe.
- 3) Gingival retraction when needed.
- 4) Good understanding of the physical properties of the impression material which results in good handling of the material.
- 5) Dry field of operation. This is because all elastic impression materials, except hydrocolloids, are hydrophobic. i.e., they don't displace moisture; therefore, any moisture if present will result in voids or folds within the final impression.

## **Disinfection of Impressions**

Set impressions are a source or reservoir for pathogens. They have been found to contain microorganisms—bacteria, fungi and viruses—following their removal from the patient's mouth, through transport to the laboratory and have also been shown to transmit microorganisms into stone and plaster while models are being poured. As such, they represent a risk for disease transmission to dental healthcare workers, transporting personnel, and laboratory personnel through indirect contact. Therefore, Irrespective of the purpose, an appropriate infection prevention protocol must be followed before, during and after impression taking to avoid cross-contamination and the risk of disease transmission.

### **Disinfectants VS Antiseptics**

**Antiseptics, define as,** Chemicals that destroy or inhibit the growth of microorganisms on living things (cell), while, **Disinfectants are,** Stronger Chemicals that destroy or inhibit the growth of microorganisms on object or non-living things .Accordingly, *disinfection of impression is The process of destruction or removal of all pathogenic organisms, or organisms capable of giving rise to infection from impression.*

### **Disinfectant protocol & Types of Impression Materials**

Impression materials include the use non-elastic (such as compound) and elastic impression materials. The vast majority of procedures use elastic impression materials – aqueous hydrocolloids (typically alginate) and non-aqueous elastomeric materials including vinylpolysiloxanes (VPS or addition reaction silicones) (e.g., Aquasil), condensation reaction silicones (e.g., Xantopren), polysulfides (e.g., Permlastic) and polyethers (e.g., Impregum). The characteristics of these materials with respect to their hydrophilicity, the presence or absence of surfactant and their tolerance of immersion in water or other fluids are key elements in understanding disinfection protocols for impression materials. For example, VPS is hydrophilic and will absorb water and other liquids, changing its dimensions, and surfactant may also leach out affecting the wettability of the impression; polyether is also hydrophilic and can leach; and alginates are sensitive to wet and dry environments.

### **An Overview of the Disinfection Procedure**

Impression materials cannot tolerate heat and must therefore be chemically treated, as with heat-sensitive instruments (except handpieces). However, while instruments can be cold sterilized by immersing them in a hospital-level disinfectant for several hours (the number depending on the chemical), impression materials are sensitive to long-term immersion and are therefore disinfected, as opposed to cold-sterilized which takes longer.

### **Disinfectant materials**

#### ➤ **Glutaraldehyde / Cidex ( 2% alkaline NaHCO<sub>3</sub>):-**

It is a high level disinfectant. Especially active against tubercle bacilli , fungi and viruses. Less toxic than formaldehyde. Exposure time: > 10hrs.

#### ➤ **Phenols:**

Acts by cell membrane damage thus releasing cell contents and causing lysis.Eg. Cresol ( LYSOL) ,chlorhexidine ( SAVLON),chloroxylenol (DETTOL) and hexachlorophen. Phenol is commonly found in mouthwashes, scrub soaps and surface disinfectants. Low efficiency disinfectant

#### ➤ **Halogens :**

Bleaching powder or hypochlorite solution mostly used disinfectant for HIV infected material. In concentration of 0.05 or 0.5% used for surface material and instruments disinfection. Should be prepared daily because of instability of sodium hypochlorite solution. Active against bacteria, spores, fungi and viruses (HB, HIV)

#### ➤ **Iodophors & Iodine**

Active against bacteria, spores & some viruses & fungi. (7.5% Povidone+iodine= Betadine The manufacturer's directions for disinfection must be followed.

### **The general steps in the disinfection procedure are as follows:**

- Blood and bioburden must first be cleaned off the impression prior to disinfection
- Cleaning should be performed immediately after taking the impression, before blood and bioburden has a chance to dry onto the impression material. While

instruments can be pre-soaked to loosen debris, impression materials have limited tolerance of immersion in liquids and this should therefore be minimized and controlled

- The impression material is next disinfected using any of disinfectant material
- After disinfecting the impression, it must be rinsed under running water before being further processed or sent to the laboratory. Failure to properly rinse the disinfectant off the impression can result in a substandard model due to incorporation of residual disinfectant into the mixed stone or plaster

#### METHODS OF DISINFECTING IMPRESSIONS

The required exposure time for a disinfectant is an important element in its selection for disinfecting impressions. The impression is soaked by either **spraying or immersing** the impression material. Both techniques have been found to be effective in controlling bacterial contamination and preventing cross-contamination. Immersing a given impression material in disinfecting solutions and other fluids for too long a period risks dimensional and surface changes – and, therefore, inaccuracies in dies and models.

Whether **Disinfecting Solution or Sprays**, the manufacturer’s recommendations must be followed. When removed from patient mouth, all impression material have been come in contact with body fluid. After removal from mouth the impression is immediately rinsed with tap water and dried with air syringe .Suitable chemicals should be used for disinfection such as glutaraldehyde Solution or iodophor sprays. Because of it tendency to distort and absorb moisture, polyether and hydrophilic addition silicon impression materials should be sprayed and stored in a plastic bag rather than submerge and soaked in a glutaraldehyde solution .For more detail read the below table???

**Recommended Disinfection Method by Impression Material**

Disinfection	Irreversible*	Reversible*	Polysulfide	Silicones	Polyether <sup>†</sup>
	Hydrocolloid	Hydrocolloid			
Glutaraldehyde 2% (10-minute soak time)	Not recommended	Not recommended	Yes	Yes	No
Iodophors (1:213 dilution)	Yes	Yes	Yes	Yes	No
Chlorine compounds (1:10 dilution of commercial bleach)	Yes	Yes	Yes	Yes	Yes
Complex phenolics	Not recommended	Limited date	Yes	Yes	No
Phenolic glutaraldehydes	Not recommended	Yes	Yes	Yes	No

\*Immersion time should be minimized. Dip in glutaraldehyde, rinse in sterile water, dip again, and delay pouring for 10 minutes while maintaining a humid environment. Alternatively, spray with sodium hypochlorite, rinse, and respray with a similar 10-minute delay before pouring.

<sup>†</sup>Imbibition distortion results from prolonged immersion. For 1:10 hypochlorite or chlorine dioxide: spray, rinse, repeat, spray again, and delay pouring for approximately 10 minutes.

## Digital impression

Digital impression represents the most recent development in Dentistry. It is procedure of recording the information related to the prepared teeth using scanning device that going to convert the shape of the prepared teeth into three dimensional (3-D) image display on the computer monitor. The operator were then designs a restoration shape using a special computer software, which is connected with a milling machine. This procedure is termed CAD-CAM (Computer Aided Designing - Computer Aided Manufacturing). The CAD/CAM system utilize a process chain consisting of scanning, designing and milling phases. The introduction of CAD/CAM systems in 1980s to dental field resolved a wide range of these limitations founding in the conventional impression techniques that required many steps; preparation of the abutment teeth, tray selection, impression making ,impression disinfection, wax up and finally casting. As a result, several factors could effect on the accuracy of the traditional impression technique , furthermore ,CADCAM provide speed, storing the captured images with no distortion , 3D pre-visualization and checking the preparation and restoration before cementation .

**Based on their production methods the Digital scanning can be divided into:**

**1) Indirect (extra oral) digital impression (Dental laboratory models):**

The indirect systems scan a stone cast or die of the prepared tooth, in the dental lab (eg Cerec-in lab). Many of this system produce copings which require the dental technician to add esthetic porcelain for individualization and characterization of the restoration.

**Dis-advantages**

- A cast need to be fabricated so, impression making is must, however master cast fabrication is time consuming and error prone method.
- Shadowing effect limits use of extra oral digitization method.

**2) Direct (intra oral) digital impression :**

Most widely and commercially used in Cerec System. This system can scan the tooth preparation intraorally using an intra-oral camera (scanner) to capture the desired image (optical impression). This image is then electronically transferred either to in office CAD CAM or in lab CADCAM (a manufacturing facility) and by selecting appropriate materials, the restoration can be fabricate and seat within a single appointment. This procedure is termed CAD-CAM (Computer Aided Designing - Computer Aided Manufacturing).

The main advantages of Direct (intra oral) digital impression, **It allows the dental care professional to take the data directly from the prepared tooth and there is no necessity of taking an impression and fabricating a cast, however , the only disadvantage of this technique that Tongue and saliva may pose some problems**

Based on data files created intra oral camera (scanner) might be

**1) Open-system software**

Architecture files, typically termed STL files , are not dependent on the manufacturer, and can be used virtually in any design software to fabricate a final restoration (Allow the adoption of the original digital data by CAD software and CAM devices from different companies )

**2) Closed-system software**

Architecture collects and manipulates data modules by the same manufacturer, offering laboratory owners security and a one-stop for resolving problems (All the steps are integrated into one system, and there is no interchangeability between different systems from other companies )

**Scanning procedure**

After the tooth preparation is complete and the tissues are retracted to visualize the tooth margins, the tooth is dried and readied for scanning. Some scanning systems require the use of an oxide powder on the tooth to remove optical highlights from the surface of the preparation and to enhance the scan quality. Scanners use either a series of static images or a stream of video images to capture the geometry of the tooth preparation.

### **Advantages of digital impression**

1. Digital impressions eliminate the uncomfortable experience of making a physical impression.
2. Evaluation of your preparation.
3. The image on the monitor shows you if you have captured all the needed details before sending it to the lab.
4. The accuracy of the mounting, bite registration, and stability of the dies create a model that allows the laboratory technician to fabricate a final restoration that has excellent marginal fit and incredibly accurate occlusion.
5. The ability to see if proper occlusal reduction has been achieved.
6. Recordkeeping. The digital impression can be stored and saved in PCs.
7. Disinfection of impressions is now a non-issue with a digital system.
8. Reducing Chairside time

### **Disadvantages of Digital impression.**

- 1- The large size and the weight of the camera head and the device size.
- 2- Digital equipment's are complex and trained operator is required to operate and maintain the device.
- 3- High Cost.



**Chairside CAD-CAM unit.**



**Laboratory CAD-CAM unit.**